


Top oven switch diagram

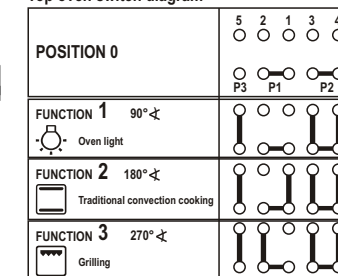

ELECTRIC DIAGRAM KEY

TOP OVEN

- F2 Oven switch
- E2 Oven thermostat
- S2 Thermostat pilot lamp
- LF2 Oven lamp
- C1 Top element
- G1 Grill element
- S1 Bottom element
- TL1 Thermal overload

BOTTOM OVEN

- F1 Oven switch
- E1 Oven thermostat
- S1 Thermostat pilot lamp

- LF Oven lamp
- V Fan
- CIR Circular element
- TL2 Thermal overload
- CF Cooling fan
- TL3 Thermal overload
- M Terminal block
- T Earth connection



BORSO del GRAPPA 31030 TREVISO - ITALY ☎ 0423/9121

LA FISCHER & PAYKEL APPLIANCE SI RISERVA, A TERMINE DI LEGGE, LA PROPRIETÀ DEL PRESENTE DISEGNO CON DIVIETO DI RIPRODURLO O COMUNICARLO SENZA SUA AUTORIZZAZIONE.

DATA
29/05/2012

DISEGNATO
MILANI M.

DESCRIZIONE IMPIANTO ELETTRICO
Double Oven

CODICE
1132124